		Precision Laser & Instrument, Inc.
HUB		CEOSLAM CONNECT
	Processing	
	Data import (drag and drop)	
	Queued processing	✓
	Automated workflows	$\checkmark$
	Data management	✓
	GeoSLAM Beam	$\checkmark$
	SLAM environment presets	$\checkmark$
	3D Viewer	
✓	Elevation	$\checkmark$
✓	Intensity (ZEB Horizon only)	✓
✓	Point cloud viewer	$\checkmark$
✓	Colour by time	$\checkmark$
🗸 ZEB Cam	Colour by RGB	ZEB Vision
$\checkmark$	Adjust to control	$\checkmark$
	Geospatial	
	Stop-and-go alignment	$\checkmark$
✓	Manual alignment	$\checkmark$
✓	Stop-and-go georeferencing	$\checkmark$
✓	GPS georeferencing (closed loop)	$\checkmark$
	GPS georeferencing (open loop)	$\checkmark$
✓	Point cloud smoothing	$\checkmark$
	Data filters	$\checkmark$
	Change detection	$\checkmark$
	Floor slices	$\checkmark$
	Measurements between points	$\checkmark$
	General	
✓	Online and offline licence activation	$\checkmark$
✓ V3.6	GeoSLAM Draw integration	✓ V4.0
✓	Third party software integrations	$\checkmark$
	User account & online authentication	$\checkmark$