

PLI Support Guide: RTK Survey Style – R10 & Access

Summary: This guide will show you how to setup the RTK Survey Style on a Data Collector w/ Trimble Access and an R10 Receiver.

- apascuzzi.PLI General Internet Survey Settings Setup Utility Files Marketplace Internet Survey
- 1. Open up Trimble Access and click on "Settings".

2. Click on "Survey Styles."



Pittsburgh Office

85 11th Street

Ambridge, PA 15003

Ph: (724) 266-1600

Fax: (724) 266-8161

Columbus Office

372 Morrison Rd., Suite D Columbus, OH 43213 Ph: (614) 759-1000 Fax: (614) 759-7059

Cincinnati Office

820-B Lebanon Street Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron Office

2567 S. Arlington Rd., Suite 5 Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999

WV Office



3. Click "New" and name it "RTK Internal." Style type should be "GNSS," since we are using GPS.



4. After your Survey Style is created, go into the Survey Styles Settings to set your defaults.



Pittsburgh Office

85 11th Street

Ambridge, PA 15003

Ph: (724) 266-1600

Fax: (724) 266-8161

Columbus Office

372 Morrison Rd., Suite D Columbus, OH 43213 Ph: (614) 759-1000 Fax: (614) 759-7059

Cincinnati Office

820-B Lebanon Street Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron Office

2567 S. Arlington Rd., Suite 5 Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999

WV Office



5. Click on "Rover options." Verify your Survey type is "RTK" and Broadcast format is "CMRx."



6. Click on "1/5" to go to Page 2. Select your "Antenna Type" for your Rover.

除 Rover	options		10	? – ×
Satellite differe	ential:		/	
Elevation mask				
PDOP mask:				
6.0				
_F Antenna—				
Type:				
R10 Intern				
Esc	No surv	ey PDOP:	:?	Accept

Pittsburgh Office

85 11th Street

Ambridge, PA 15003

Ph: (724) 266-1600

Fax: (724) 266-8161

Columbus Office

372 Morrison Rd., Suite D Columbus, OH 43213 Ph: (614) 759-1000 Fax: (614) 759-7059

Cincinnati Office

820-B Lebanon Street Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron Office

2567 S. Arlington Rd., Suite 5 Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999

WV Office



Sales

Service
Rental
Training
Support

7. Click "Accept' and go to the "Rover radio" you want to be on "Receiver Internal." Notice at the bottom of the screen there is a "Connect" button. That is where you can connect to configure your radio frequency. Make sure your operating mode is set to "Rover," and write down your Frequency and Base Radio Mode. This will be important when we set up your base radio.

A	Rover ra	dio			÷		? –	- ×
Type:					_			80%
Rece	iver inter	rnal		7				60%
							4×	1
Trim	a: blo 450/9/						7	
	DIE 400/9							
							7	?
							<u>M</u> a	ар
							Me	nu
							F <u>a</u> vo	rites
							Swite	ch to
		No s	urvey	PDOP:	?			
	L						i Acc	
Esc	Connect	}					ALL	ept
Esc	Connect)					Acc	ept
Esc	Connect)					Acc	ept
Esc	Connect Radio co	onfigi	uratio	n	-	• •	? -	ept - ×
Esc Èsc I Conne	Connect Radio co	onfigi	uratio	n io opera	ting ma	Dide:	? -	ept - × 80%
Esc © I Conne Rece	Connect Radio co cted to: eiver inte	onfigu	uration Radi	n io opera ver	ting ma	Dide:	? -	- × 80% 60%
Esc © I Conne Rece Freque	Connect Radio ccc cted to: eiver inte	onfigu rnal	uratio Radi	n io opera ver	ting ma	Dode:	? -	- × 80% 60% 1
Esc © I Conne Rece Freque 462.4	Connect Radio co cted to: siver inte ency: 40000 MH	onfigi rnal Iz ▼	uratio Radi	n io opera ver	ting ma	Dide:	? -	- × 80% 60% 1
Esc © I Conne Rece Freque 462.4 Base r	Connect Radio co cted to: eiver inte ency: 40000 MH adio mode:	onfigu rnal Iz v	uration Radi	n io opera ver	ting ma	Dide:	? -	- × 80% 60% 1
Esc Conne Rece Freque Hase r TT45	Connect Radio co cted to: eiver inte ency: 40000 MH adio mode: 0s at 800	onfigu rnal Iz 🔽	uration Radi	n o opera ver	ting ma	ode:	? -	- × 80% 60% 1
Esc Conne Rece Freque 462.4 Base r TT45	Connect Radio co cted to: eiver inte ency: 10000 MH adio mode: 0s at 800	onfigu rnal Iz 🔽	uratio Radi	n io opera ver	ting ma	Dide:	? -	- × 80% 60% 1 ?
Esc Conne Rece Freque Base r TT45	Connect Radio co cted to: eiver inte ency: A0000 MH adio mode: Os at 800	onfigu rnal Iz ▼ 90 bps	uration Radi	n io opera ver	ting ma	Dede:		- × 80% 60% 1 ?
Esc Conne Recce Freque 462.4 Base r TT45	Connect Radio co cted to: eiver inte ency: 40000 MH adio mode: 0s at 800	onfigu rnal Iz 💌	uration Radi	n o opera ver	ting ma	Dete:	Precent	- × 80% 60% 1 ? ap enu prites
Esc Conne Rece Freque Base r TT45	Connect Radio co cted to: eiver inte ency: 40000 MH adio mode: 0s at 800	onfigu rnal Iz ▼ 90 bps	uration Radi	n o opera ver	ting ma	ode:	Proventier of the second secon	- × 80% 60% 1 ? ap enu orites ch to
Esc Conne Rece Freque H62.4 Base r TT45	Connect Radio co cted to: eiver inte ency: 40000 MH adio mode: 0s at 800	onfigu rnal Iz – 10 bps No s	uratio Radi	n to opera ver	ting ma	ode:	Preceiver of the second	 × 80% 60% 1 ? ap enu orrites ch to

Pittsburgh Office

85 11th Street

Columbus Office

372 Morrison Rd., Suite D Ambridge, PA 15003 Columbus, OH 43213 Ph: (724) 266-1600 Ph: (614) 759-1000 Fax: (724) 266-8161 Fax: (614) 759-7059

Cincinnati Office

820-B Lebanon Street Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron Office

2567 S. Arlington Rd., Suite 5 Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999

WV Office



8. Click "Accept" and go into "Base options." As before, you want the same Survey Type and Broadcast format. Set your antenna type to what antenna you are using. In this case, we are using a Trimble R10.

(Base opti	ions		→ (?	– ×
Surve	y type:		Broa	dcast format	:	
RTK	& infill	•	СМ	Rx	▼	
Statio	n index:		Logg	ing device:		
21			Rec	eiver 🔻		
Loggi	ng interval:					
15s	•					
Elevat	ion mask:					
10°						
						1/3 ▼
_		No survey	1.3			
Esc						ccept

9. Click "Accept" and go into "Base radio." In this case, we are using the internal radio in the base antenna, but if you are using an external radio you change that within the "Type:" At the bottom of the screen, you will notice ">Base." This will switch you into Base Mode, allowing you to connect to the base radio.

😹 Base radio 🔪 🗛 🖉	? — ×		Radio configur	ration .	> 0	? _ X		
Туре:	B 80%	l I	Connected to:	Radio operating m	ode:	80%		
Receiver internal	60%		Receiver internal	Base 💌		■ 60%	1	
	J 1		Frequency:			<i></i>		
Method:	_		462.40000 MHz 🔻				1	
Trimble 450/900 🔻	T		Base radio mode			<u> </u>		
	7					7	1	
	1 2		11450s at 8000 bps			A ?	1	
	Map		Repeaters supported:			Мар		
	Menu		None 🔻			Menu		
			Channel sharing:				1	
	Favorites		None	•	1/2	F <u>a</u> vorites		
	Switch to		Hone		•	Switch to		
No survey PDOP:?			No su	rvev PDOP:?				
Esc	Accept		Esc	,		Accept		
>Base								

Now check your notes and be sure that you have the same Frequency and Base Radio Mode selected so that the Base and Rover communicate with each other. Click "Accept" and store this Survey Style.

10. All other settings are options, but do not interfere with the communication of the base to the rover. You're all set!

Pittsburgh Office **Columbus Office**

Cincinnati Office

Akron Office

WV Office

85 11th Street Ambridge, PA 15003 Ph: (724) 266-1600 Fax: (724) 266-8161

372 Morrison Rd., Suite D Columbus, OH 43213 Ph: (614) 759-1000 Fax: (614) 759-7059

820-B Lebanon Street 2567 S. Arlington Rd., Suite 5 Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999





Construction • Survey • GIS

Sales • Service • Rental • Training • Support

Pittsburgh Office

Columbus Office

85 11th Street Ambridge, PA 15003 Ph: (724) 266-1600 Fax: (724) 266-8161

372 Morrison Rd., Suite D Columbus, OH 43213 Ph: (614) 759-1000 Fax: (614) 759-7059

Cincinnati Office

820-B Lebanon Street Monroe, OH 45050 Ph: (513) 539-0022 Fax: (513) 539-0033

Akron Office

2567 S. Arlington Rd., Suite 5 Akron, OH 44319 Ph: (330) 633-4900 Fax: (330) 633-4999

WV Office